

# 用戶手冊

## User's Manual




### 抽油煙機

### Super Range Hood

型號 / Model :

GS331

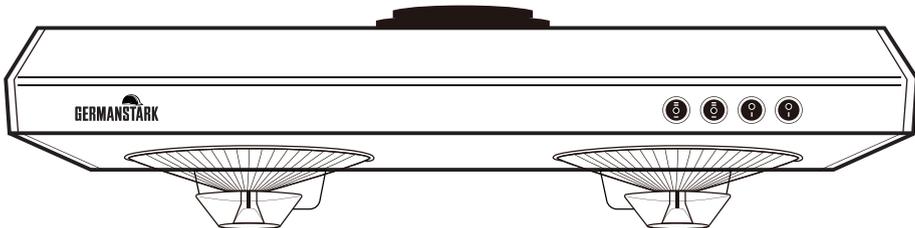

感謝您購買本公司的產品，使用本產品前，請務必注意安全操作須知。  
請在閱讀後，妥善保管好說明書，以備查閱。  
因為本公司的產品不斷改進，如有變更，恕不另行通知。


Thank you for purchasing our product. Before using the product make sure that you have followed the safety instructions. Please keep this manual for future reference. There will be increase improvements on our products. Information is subject to change without prior notice.

## 安裝前檢查

- 檢查配件是否齊全。
- 連接電源檢查抽油煙機各功能是否操作正常。


### (A) 理想的安裝位置

- 抽油煙機周圍應避免門窗過多。  
(打開門窗容易造成流過燃氣爐的強氣流，  
會嚴重降低抽油煙機的使用效果。)
- 請對正燃氣爐的爐面。
- 抽油煙機底部與燃氣爐的爐面距離以75cm  
左右為宜。較近的距離會有更好的排煙效果。

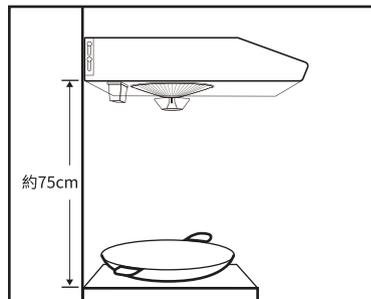


### (B) 風管

- 風管不應少於6寸直徑，並不超過兩米兩彎。
- 風管的排風出口應盡量避免對著環境風向。
- 風管孔的位置應盡量靠近抽油煙機，以使用較短的距離將油煙排出室外。
- 可以在玻璃或牆上開風管孔，將風管穿出室外。

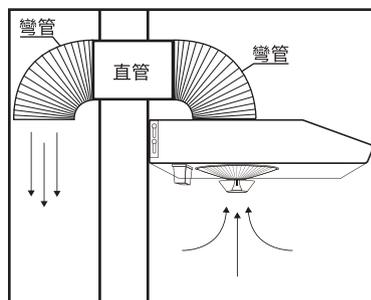


## (C) 開風管孔

- 在選好的開風管孔處畫好開孔範圍，然後開孔。
- 鑽牆時，應注意不要對牆壁的结构及外觀造成不必要的損害

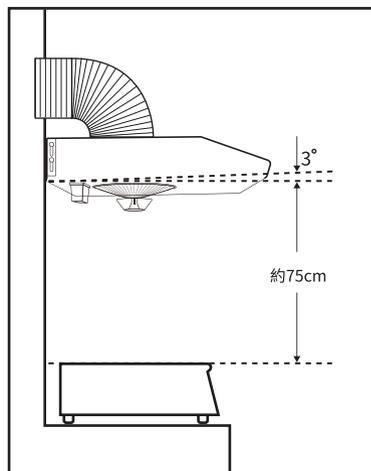


## (D) 裝設機體及風管

- 機體應放置水平，前部應略微上翹。
- 按機體外形的距離，與地面平行的方向用電鑽鑽兩個小孔，在孔中打入膠塞，在膠塞中擰入大頭自攻螺絲。
- 調節機體後部的吊鐵，將吊鐵掛在自攻螺絲上，擰緊自攻螺絲。調節機體水平並上緊螺釘。
- 將風管座套在機體上部的出風口上，將風管裝入風管座及穿出室外。

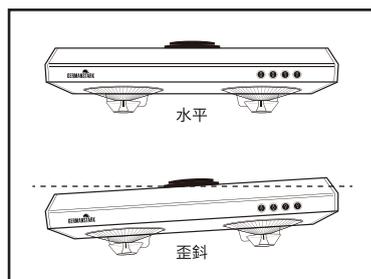


## 外形尺寸

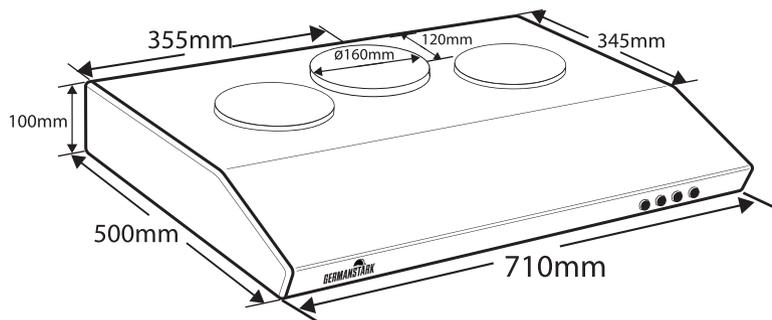

## 注意事項

- 機體應放置水平，前部應略微上翹。
- 按機體外形的距離，與地面平行的方向用電鑽鑽兩個小孔，在孔中打入膠塞，在膠塞中擰入大頭自攻螺絲。
- 調節機體後部的吊鐵，將吊鐵掛在自攻螺絲上，擰緊自攻螺絲。調節機體水平並上緊螺釘。
- 將風管座套在機體上部的出風口上，將風管裝入風管座及穿出室外。

## 使用方法

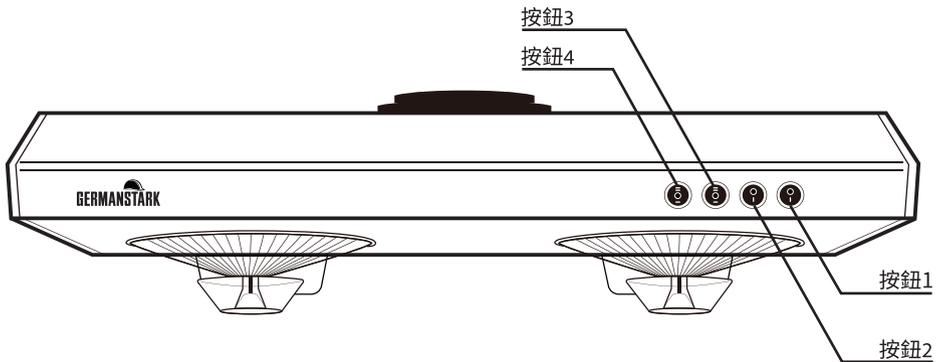

操作方法		
按鈕	功能	操作方法
按鈕1	風扇總開關	“ ”為啟動風扇，“○”為關閉風扇
按鈕2	照明燈	“ ”為啟動照明燈，“○”為關閉照明燈
按鈕3	右風扇	“○”為關閉風扇，“-”為慢風、力，“=”為快風力
按鈕4	左風扇	“○”為關閉風扇，“-”為慢風力，“=”為快風力


\*要先開啟風扇總開關，才能獨立開關右風扇或左風扇\*  
\*若果風扇總開關關上了，右、左風扇不能獨立啟動\*

## \*Please check the following items before installation:

- Check all the accessories.
- Connect the power and turn on the button of motors and lighting system for checking their operation.


### (A) Ideal installed position:

- Keep the range hood far away from the window and door for avoiding the air convection. (The air convection will affect the range hood function.)
- The range hood should on top of the stove.
- The distance between the bottom of the range hood and top of the stove should around 75cm. The shorter distance can make the range hood more effective.

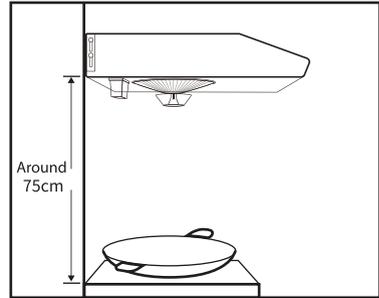


### (B) Air tube:

- The air tube should have a diameter of no less than 6 inches and should not exceed 2 meters in length with two bends.
- The exhaust outlet of the air tube should avoid facing the prevailing wind direction as much as possible.
- The position of air tube hole should near with the range hood, it can use the shorter distance to exhaust.
- It can drilled the hole in the glass or wall. And put the air tube to outdoor.

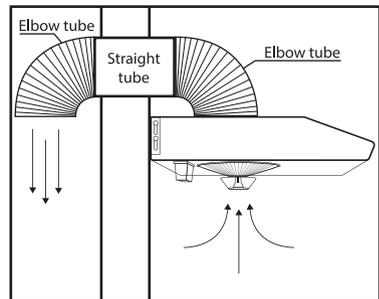


## (C) Drilled the air tube hole:

- Make a mark to point the drilling area.
- Please do not make the unnecessary damage on the wall.

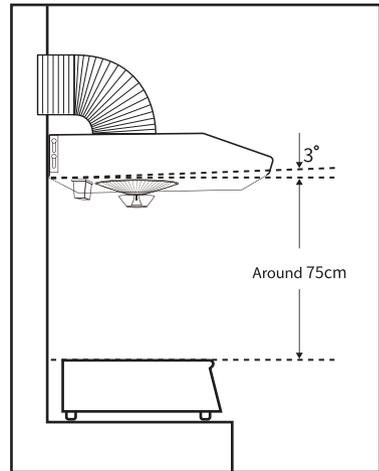


## (D) Install the range hood and air tube:

- Keep the range hood in level and slightly upturned.
- It follows the instruction, drilled two holes level with the surface. Drive 2 steel nails in the wall and put the upper corner in the both side of the range hood.
- Fit the screw in a well level position.
- The tube-seat has been assembled on top of the range hood. Please put the air tube into the tube-seat and put it outdoor.

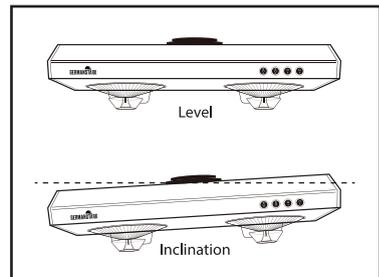


## DIMENSIONS

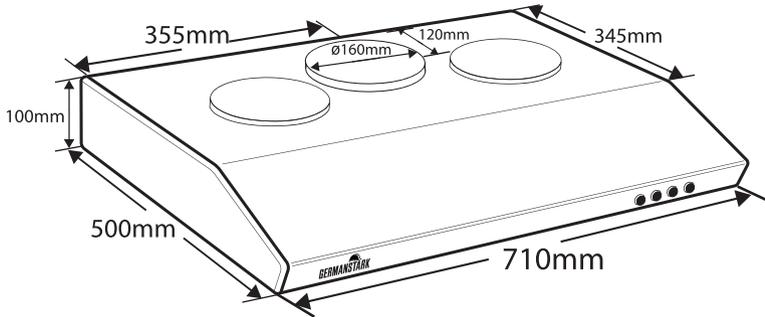

## ATTENTION

- The connection power must have ground wire.
- Please always clean the range hood and oil cup.
- Please don't disassembly the range hood.
- Please don't make the air tube exhausted to other hot flue.

# INSTRUCTIONS FOR USE

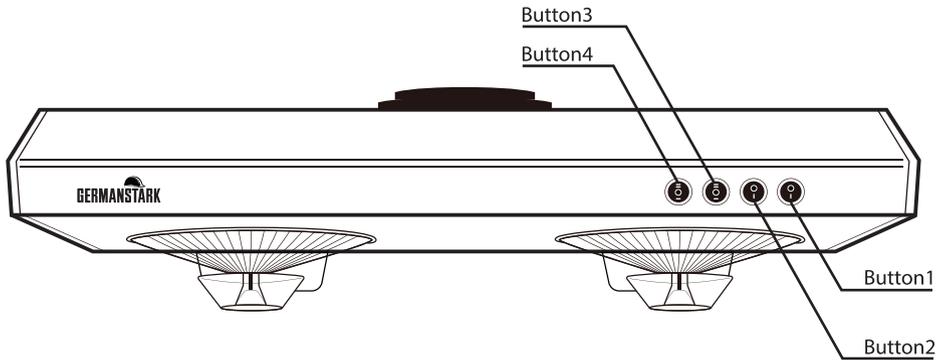

INSTRUCTIONS FOR USE		
Button	Function	Instruction for use
Button 1	Hood master switch	“ ”= turn on, “o”= turn off
Button 2	Light	“ ”= turn on, “o”= turn off
Button 3	Right exhaust	“o”= turn off, “-”= slow exhaust, “=”= fast exhaust
Button 4	Left exhaust	“o”= turn off, “-”= slow exhaust, “=”= fast exhaust

\*Before turn on the right/left exhaust, it needs to turn on the master switch first.\*  
 \*If the master switch turn off, the right/left exhaust can't turn on independently.\*

LIGHTING GAS STOVES TRADING LTD.  
 Tel: (852) 2490 0073

本資料上所有內容均經過認真核對，如產品規格及設計有更改或者內容產的誤解，本公司保留解釋權。  
 All information printed have been checked through to be correct. Product specifications and design if changed or any misunderstanding of the content, we reserve the right of explanations.